

FOTO-QUELLE INTERNATIONAL

Deutschland:
FOTO-QUELLE Schickedanz & Co.
Thomas-Mann-Strasse 50
8500 Nürnberg 50
Tel: (09 11) 86 01-1

France:
FOTO-QUELLE France S.A.R.L.
38, Avenue de Belgique
68110 Illzach
Tel: (89) 46 33 24

Nederland:
FOTO-QUELLE Nederland B.V.
Spaarneweg 18
2142 EN Cruquius
Tel: (0 23) 29 01 95

Belgie/Belgique:
FOTO-QUELLE BENELUX
GMBH & CO. KG • Luxembourg
de Keyserlei 18, Antwerpen
Tel: (0 31) 32 54 47

Österreich:
FOTO-QUELLE Ges. m.b.H.
Objekt 19, Strasse 14
Industriezentrum NÖ/Süd
A-2351 Wiener Neudorf
Tel: (0 22 36) 22 36

Schweiz:
FOTO-QUELLE GMBH
Zweigniederlassung
Binzstrasse 39, 8002 Zürich
Vertrieb und Information:
JELMOLI SA, Seidengasse 1
8021 Zürich
Tel: (01) 2 20 44 11



Luxembourg:
FOTO-QUELLE BENELUX
GMBH & CO. KG
12, Av. de la Gare, Luxembourg
Tel: (0 03 52) 48 88 12








Italia:
FOTO-QUELLE Italia
s.r.l. & C.s.a.s.
Sede Amministrativa
Corso Buenos Aires 45,
20124 Milano
Tel: (02) 27 34 04

USA:
FOTO-QUELLE
NORTH AMERICA L.P.
3725 NORTH, 126th Street
Unit "O"
Brookfield, WI 53005
Tel: (414) 781 4616

REVUE 660/640

Bedienungsanleitung
Operating instructions
Mode d'emploi
Gebruiksaanwijzing
Istruzioni d'uso

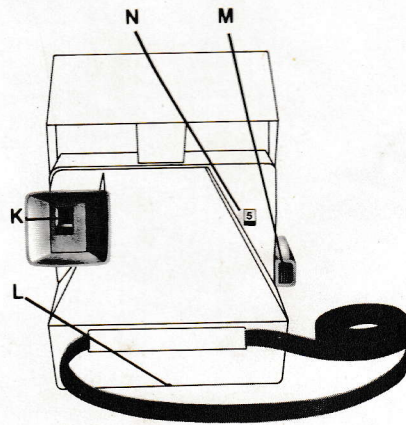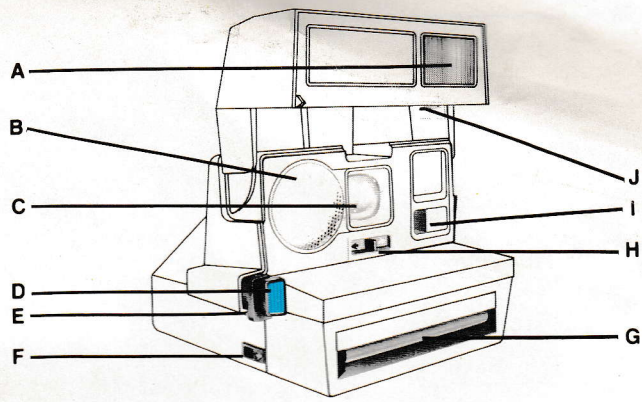

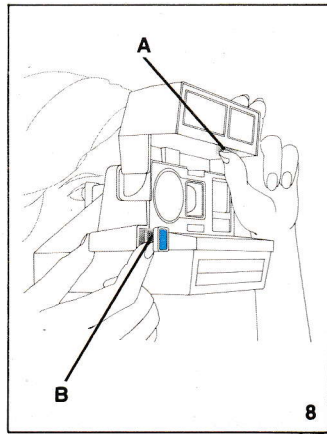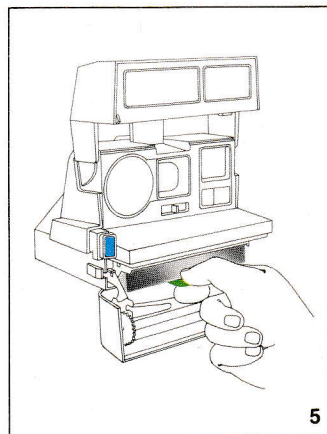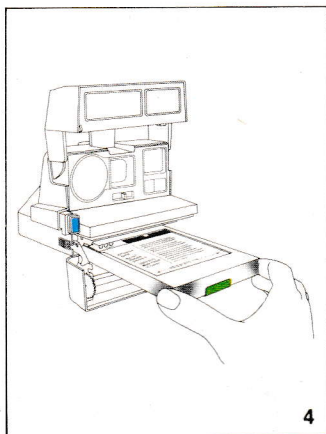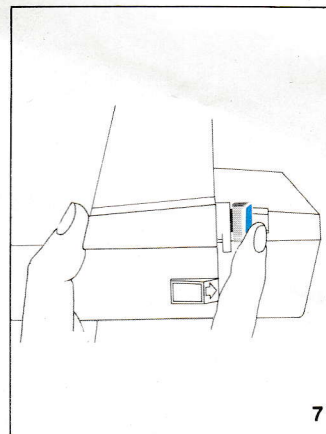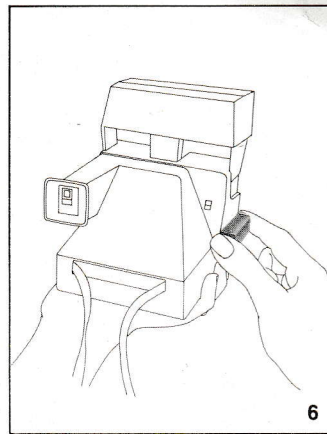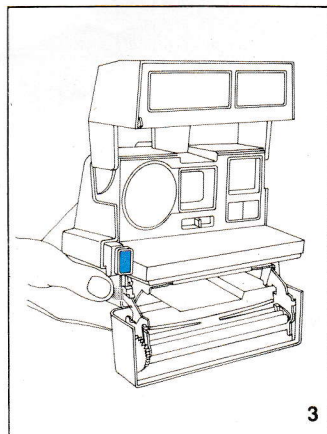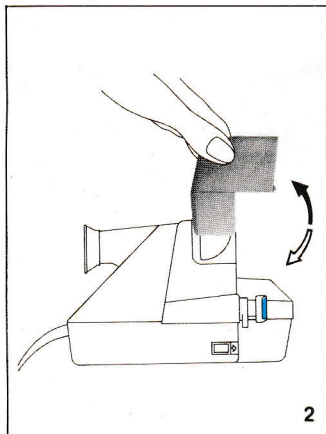

SEE THE WORLD IN A NEW LIGHT

Polaroid has designed a unique photographic system. Using a tiny electronic computer, the system — a camera with a built-in flash and 600 instant film — measures light from the subject and blends it with the right amount of flash for beautiful pictures, indoors and outdoors. In strong sunlight, the flash adds just enough light to soften harsh shadows.

The camera's built-in electronic flash unit lifts up for picture-taking, folds down for carrying ease. The flash is designed to be used for **every** picture — outdoors and indoors.

In addition, the Model 660 AutoFocus camera has an automatic focusing system which consists of a fixed front lens and an internal rotating disk with four lenses. Using sound waves to measure the distance between the camera lens and your subject, the computer selects the correct lens that will put your subject in sharp focus.

Throughout the text you will find a series of numbers. Each of these refers to a picture on the fold-out pages.

CAMERA PARTS: PICTURE 1

- | | |
|--|--|
| A. Electronic flash | G. Picture exit slot |
| B. Transducer (Model 660 only; sends soundwaves and receives the echo) | H. Lighten/darken control |
| C. Lens | I. Photocell |
| D. Shutter button (charges the flash AND takes the picture) | J. Autofocus by-pass button (Model 660 only) |
| E. Non-flash button | K. Viewfinder |
| F. Film door latch | L. Tripod socket |
| | M. Thumb rest |
| | N. Picture counter |

TO RAISE AND LOWER THE FLASH UNIT: PICTURE 2

When you are not using the camera, lower unit to protect lens and to lock shutter button.

TO LOAD AND REMOVE FILM: PICTURES 3, 4 AND 5

Use 600 instant color film only. Other films will not fit into or work with this camera. The high-energy battery built into every film pack powers both the camera and the electronic flash.

TO HOLD THE CAMERA: PICTURE 6**TO TAKE THE PICTURE**


- Use flash for every picture, indoors and outdoors.
- **Stand at least 60cm (2 ft.) from your subject when using Model 660, 1.2m (4 ft.) with Model 640.**

- Indoors and at night outdoors, the flash range is: 60cm - 4.25m (2 - 14 ft.) for Model 660 and 1.2 - 3m (4 - 10 ft.) for Model 640.


- Model 660: Be sure the soundwaves have a clear path to your subject.

Look through the viewfinder and frame your picture.

1. To charge the flash: Press the shutter button (Picture 7) **halfway**. A red light in the viewfinder means the flash is charging. **In about 5 seconds** the flash is charged and the red light goes off. You can then take a picture, or you can release the button and the flash will remain charged for several minutes.

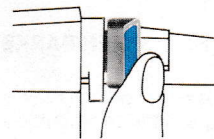

2. To take the picture: Once the flash is charged, press the shutter button **all the way**. If the red light in the viewfinder goes on briefly, just continue to take the picture.

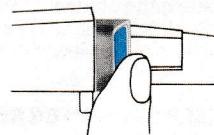**Charge the flash in advance to take a spontaneous picture.**

Hold the developing picture by its wide border. While it is developing, keep it out of direct sunlight and inside a warm pocket when temperature is below 13°C (55°F). Also, when the temperature is below 13°C (55°F), keep the camera and film warm.

Caution: Avoid contact with caustic paste inside film. In case of contact, wash off immediately. Do not cut, burn, take apart battery, or allow metal to touch terminals.


THE AUTOFOCUS BY-PASS AND NON-FLASH BUTTONS

- **Model 660:** To photograph a **daylight** scene (more than 3m/12 ft. away) through glass: Press and **hold in** the autofocus by-pass button (Picture 8,A), then press the non-flash button (Picture 8,B) to take your picture.
- **Model 640:** To avoid a flash reflection when photographing through glass in daylight: Press the non-flash button (Picture 8,B) to take your picture.

THE LIGHTEN/DARKEN CONTROL

Use it to lighten (A) or to darken (B) a second picture of the same subject.

When you have finished re-taking your pictures, return the control to the center (C). Should you forget, a double white arrow will appear inside the bottom of the viewfinder to serve as a reminder.

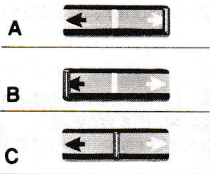**KEEP DEVELOPER ROLLERS CLEAN**

Dirt on the rollers inside the film door can cause repeated spots, bar patterns and other faults on your pictures. Clean rollers with a damp lint-free cloth.

IF THE CAMERA DOES NOT OPERATE

- Check the picture counter. When the film pack is empty, the flash will charge but the shutter will not operate.
- Look through the viewfinder. If the red light is on, the flash is still charging and the shutter will not operate.

THREE-YEAR WARRANTY

If this camera proves defective within three years of the original purchase date, we will repair it or, at our option, replace it free of charge with a camera of the same or equivalent model. We will make no charges for labor, service or parts. This warranty does not cover damage caused by accident, misuse or tampering with the camera. Repairs to correct such damage will be made at a reasonable charge.

To take advantage of this warranty, the camera must be returned to FOTO-QUELLE. The above warranty and provisions do not affect your statutory rights.